 


# OPERATION AND INSTALLATION

Hand dryer

- » HTE 4
- » HTE 5

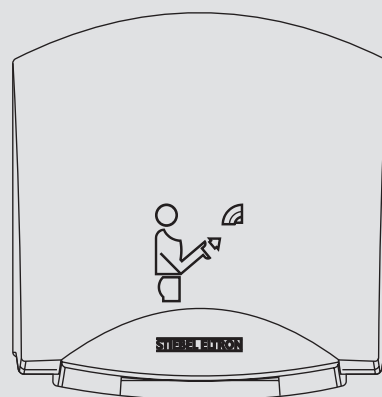

**STIEBEL ELTRON**

<b>SPECIAL INFORMATION</b>	<b>2</b>
<b>OPERATION</b>	<b>3</b>
1. General information	3
1.1 Document information	3
1.2 Key to symbols	3
2. Safety	3
2.1 Intended use	3
2.2 Safety information	3
2.3 CE designation	4
2.4 Test symbols	4
3. Equipment description	4
4. Operation	4
5. Cleaning, care and maintenance	4
6. What to do if ...	4
6.1 ... the appliance does not start	4
6.2 ... the fan is running but there is no hot air	4
6.3 The type plate	4
<b>INSTALLATION</b>	<b>5</b>
7. Safety	5
7.1 General safety instructions	5
7.2 Instructions, standards and regulations	5
8. Installation	5
8.1 Installation information	5
8.2 Installation conditions and preparations	5
8.3 Power supply	5
9. Installation	5
9.1 Removing the HTE 4 casing cover	5
9.2 Removing the HTE 5 casing cover	5
9.3 Wall mounting	6
9.4 Fitting the HTE 4 casing cover	6
9.5 Fitting the HTE 5 casing cover	6
10. Appliance handover	6
11. Specification	7
11.1 Specification	7
11.2 Wiring diagram	7
11.3 Clearances	7
11.4 Guidelines for installation height	7
11.5 Dimensions	8
<b>GUARANTEE</b>	<b>9</b>
<b>ENVIRONMENT AND RECYCLING</b>	<b>9</b>
<b>AUSTRALIA - CUSTOMER SERVICE AND WARRANTY</b>	<b>10</b>

## SPECIAL INFORMATION

- Keep children under the age of 3 away from the appliance if constant supervision cannot be guaranteed.
- Children from the age of 3 to 7 may switch the appliance on and off, provided they are supervised or have been instructed in the safe operation of the appliance and understand any risks that may result there from. This is subject to the appliance having been installed as described. Children from the age of 3 to 7 must not plug the power cable into its socket nor regulate the appliance.
- The appliance may be used by children aged 8 and older and persons with reduced physical, sensory or mental capabilities or a lack of experience and know-how, provided that they are supervised or they have been instructed on how to use the appliance safely and have understood the resulting risks.
- Children must never play with the appliance. Children must never clean the appliance or perform user maintenance unless they are supervised.
- Parts of the appliance can get very hot and may cause burns. Particular caution is advised when children or vulnerable persons are present.
- Never cover the appliance.
- Never install the appliance directly below a wall socket.
- Install the appliance in such a way that the control equipment cannot be touched by a person in the bath or shower.
- In the case of a permanent connection, the appliance must be able to be separated from the power supply by an isolator that disconnects all poles with at least 3 mm contact separation.

- In the event of damage to the power cable this must always be replaced by a qualified electrician authorised by the manufacturer, using original spare parts.
- Secure the appliance as described in chapter "Installation / Installation".

## OPERATION

### 1. General information

#### 1.1 Document information

The chapter **Operation** is intended for users and contractors.

The chapter **Installation** is intended for heating contractors.



**Please read**  
Read these instructions carefully before using the appliance and retain them for future reference. Pass on the instructions, if required, to a new user.

#### 1.2 Key to symbols

**Symbols in this documentation:**

In these instructions you will come across symbols and highlights. These have the following meaning:



**Risk of injury!**  
Information concerning possible risk of injury.



**Danger of electrocution!**



**Risk of burning!**



**Fire hazard!**



**Never cover!**



**Possible damage**  
Information concerning damage to the appliance, environmental damage or material losses.



**Note!**  
Text next to this symbol is particularly important.

» The "»" symbol indicates that you should do something. The action you need to take is described step by step.

### 2. Safety

#### 2.1 Intended use

The appliance is used to dry wet hands.

This appliance is designed for domestic use. It can be used safely by untrained persons. The appliance can also be used in a non-domestic environment, e.g. in a small business, as long as it is used in the same way.

Any other use beyond that described shall be deemed inappropriate. Observation of these instructions is also part of the correct use of this appliance. Any modifications or conversions to the appliance void all warranty rights.

#### 2.2 Safety information



**Risk of burning!**  
Parts of the appliance can get very hot and may cause burns. Particular caution is advised when children or vulnerable persons are present.



**WARNING Injury**  
Keep children under the age of 3 away from the appliance if constant supervision cannot be guaranteed.

Children from the age of 3 to 7 may switch the appliance on and off, provided they are supervised or have been instructed in the safe operation of the appliance and understand any risks that may result there from. This is subject to the appliance having been installed as described. Children from the age of 3 to 7 must not plug the power cable into its socket nor regulate the appliance.

The appliance may be used by children aged 8 and older and persons with reduced physical, sensory or mental capabilities or a lack of experience and know-how, provided that they are supervised or they have been instructed on how to use the appliance safely and have understood the resulting risks.

Children must never play with the appliance. Children must never clean the appliance or perform user maintenance unless they are supervised.



**Fire hazard!**  
Never place any objects on top of the appliance. Never lean any objects against it or place any objects between the appliance and the wall.

Never place any flammable, combustible or insulating objects or materials, such as laundry, blankets, magazines, containers with floor polish or napsan, spray cans or similar, in direct proximity of the appliance.



### Fire hazard!

Never operate this appliance ...

- in rooms where the appliance is at risk from fire or explosion as a result of chemicals, dust, gases or vapours.
- in the direct proximity of pipes or receptacles that carry or contain flammable or explosive materials.
- if work such as laying cables, grinding or sealing is carried out in the installation room.
- if sprays, floor polish or similar products containing napsan are used. Ensure the room is adequately ventilated before using the appliance.



### Danger of electrocution!

Never insert any objects into any aperture in the appliance. This can lead to fatal electric shocks and / or fires.



### Never cover!

Never cover the appliance to prevent overheating.



### Note!

Never operate the appliance if the minimum clearances to adjacent surfaces are not maintained.



### Note!

If you use the appliance in workshops or other rooms where flue gases, oil and petrol vapours, etc. are present, or solvents and chemicals are used, lasting, unpleasant odours and possibly contamination can result.



### Note!

Ensure that the air inlet aperture at the bottom and back of the appliance is always open.



### Note!

Maintain the minimum clearance (see chapter Specification) to the air outlet grille at the bottom. The hot air must be able to escape unimpeded.



### Note!

Never spray the appliance with a water hose to clean it (see chapter Cleaning, care and maintenance).

## 2.3 CE designation

The CE designation shows that the appliance meets all essential requirements according to the:

- Electromagnetic Compatibility Directive
- Low Voltage Directive

## 2.4 Test symbols

See type plate.

## 3. Equipment description

The appliance works without contact. It is fitted with an optical proximity sensor, which automatically activates the heater and fan when your hands approach the appliance. The response area is between 4 cm and 13 cm beneath the air outlet grille. When you remove your hands, the appliance stops after approx. three seconds.

The casing design makes it virtually impossible to use the appliance as a depository for cigarettes or similar. Avoid any wall offset at the top of the appliance to maintain this effect.

The HTE 5 is also protected against damage by its robust diecast aluminium casing.

## 4. Operation

» Shake your wet hands over the sink before drying. This reduces the drying time and saves energy.

» Then hold your hands under the air outlet grille and rub them together in the hot air current.

## 5. Cleaning, care and maintenance

A damp cloth is sufficient for cleaning the casing. Never use abrasive or corrosive cleaning agents. Go over the casing with a soft cloth. Never spray the appliance using a water hose or other tools. This would let water penetrate the appliance.

## 6. What to do if ...

### 6.1 ... the appliance does not start

- Check the fuses / MCBs in your fuse box.
- Covering the optical proximity sensor impairs the function of the appliance. In this case, the appliance stops after approx. three seconds to avoid constant operation. In the event of a fault, check whether the sensor surface is clear. Once you have removed any objects, the appliance will work correctly again.

### 6.2 ... the fan is running but there is no hot air

- When overheating occurs, the heater bank is switched off but the fan continues to run for cooling purposes. The temperature sensor switches the heater on again approx. two minutes after the appliance stops.

### 6.3 The type plate

The type plate is located at the bottom of the appliance.

# INSTALLATION

## 7. Safety

Only qualified contractors should carry out installation, commissioning, maintenance and repair of the appliance.

### 7.1 General safety instructions

We guarantee trouble-free operation and operational reliability only if the original accessories and spare parts intended for the appliance are used.

### 7.2 Instructions, standards and regulations



**Note!**  
Observe all applicable national and regional regulations and instructions.



**Note!**  
When installing the appliance in rooms with a bath and / or shower, take the relevant safety zone into account. Install the appliance in accordance with the information on the type plate. Refer to VDE 0100 - 701 for the standard applicable to safety zones in Germany.

## 8. Installation

### 8.1 Installation information

- Fit the appliance flat against a solid wall (without any offset) to prevent damage caused by vandalism.

### 8.2 Installation conditions and preparations

- Always fit the appliance to a vertical wall that is temperature-resistant to over 90 °C.
- Always maintain the specified minimum clearances.

### 8.3 Power supply

 


**Note!**  
Observe the type plate. The specified voltage must match the mains voltage.



**Danger of electrocution!**  
Only use a permanent connection to the power supply. The appliance must be able to be separated from the mains power supply by an isolator that disconnects all poles with at least 3 mm contact separation.

- » Select a power cable with an adequate cross-section.
- » Connect the power cable in accordance with the wiring diagram (see Specification).

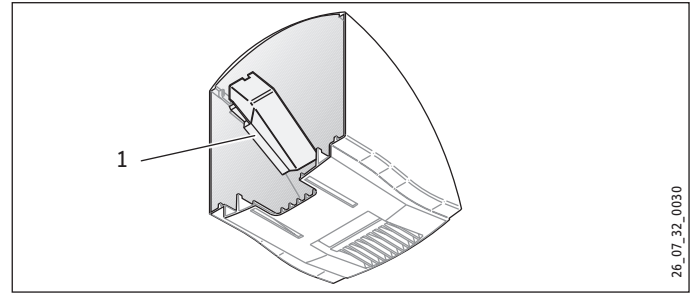

1 Plastic bracket


The plastic bracket fixed to the inside of the HTE 5 casing cover provides additional insulation for the power cable and terminal.

## 9. Installation



 **Danger of electrocution!**  
Carry out all electrical connection and installation work in accordance with relevant regulations.

### 9.1 Removing the HTE 4 casing cover

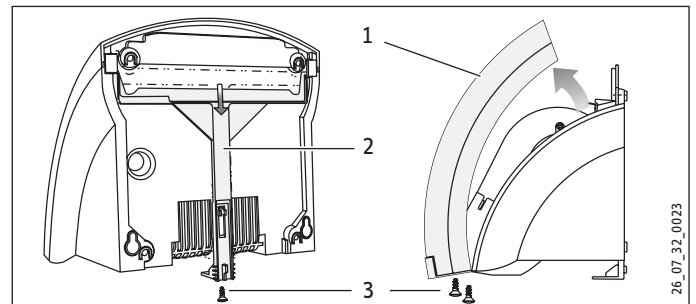


- 1 Casing cover
- 2 Locking slide
- 3 Screws

- » Undo the screws on the casing cover and locking slide.
- » Pull the locking slide down.
- » Remove the casing cover.


### 9.2 Removing the HTE 5 casing cover

 - » Undo the locking screw.
- » Pull the locking slide down.
- » Remove the casing cover.


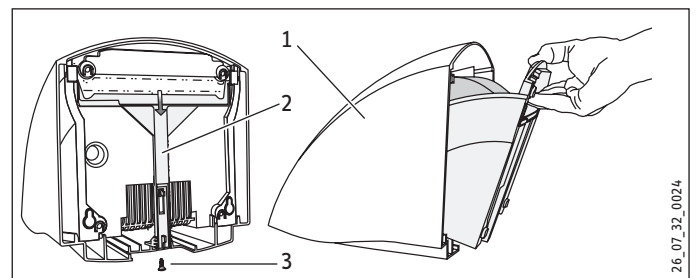


- 1 Casing cover
- 2 Locking slide
- 3 Locking screw

### 9.3 Wall mounting

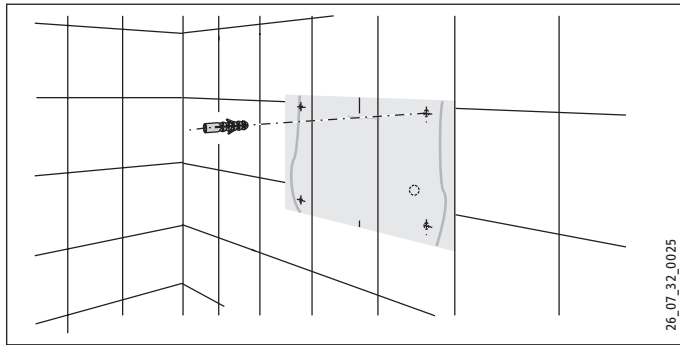 

  - » Cut out the drilling template. This can be found at the end of these instructions.
- » Transfer the four mounting points on to the wall using the drilling template. Pay attention to the length and position of the power cable. Use our height guidelines to help you (see Specification).
- » Drill the fixing holes and insert rawl plugs.
- » Insert the lower fixing screws into the wall.

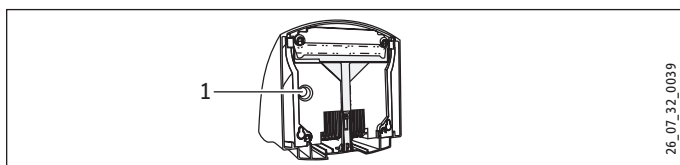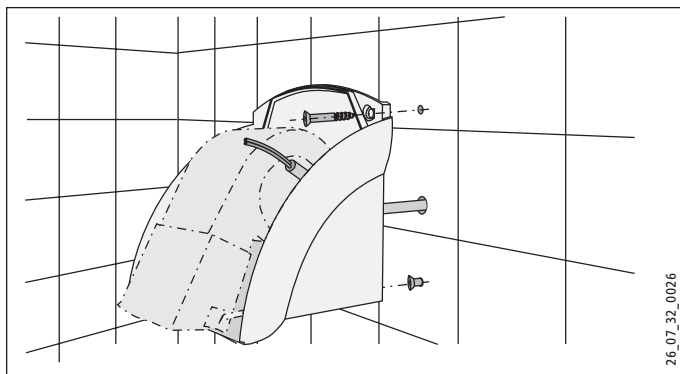

#### 1 Cable entry

- » Pull the power cable through the cable entry in the back panel of the appliance.
- » Fit the appliance with the keyhole fixings on to the fixing screws.
- » Secure the appliance to the wall using two more screws.
- » Connect the power cable to the appliance.



#### Note!

 
Ensure that the wires of the power cable are not near the fan motor.



#### Note!


Observe the maximum length of the power cable. (See Specification)

### 9.4 Fitting the HTE 4 casing cover

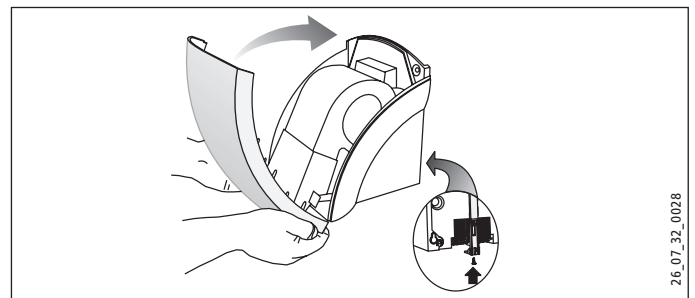

- » Place the casing cover on the appliance so that it is slightly tilted and pivot it towards the wall.
- » Push the locking slide up as far as it will go.
- » Secure the locking slide and the casing cover with screws.

### 9.5 Fitting the HTE 5 casing cover

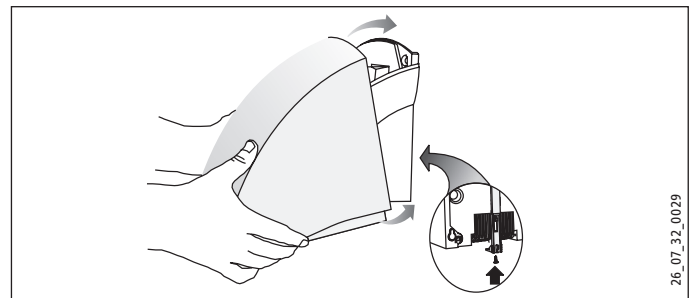 

- » Slide the casing cover, slightly tilted, over the appliance towards the wall as far as it will go. Ensure that the hooks provided on the bottom of the casing cover catch behind the back panel of the appliance.
- » To lock in place, lift the casing cover slightly at the front and push the locking slide up as far as it will go.
- » Secure the locking slide with screws.

## 10. Appliance handover

Explain the functions of the appliance to the user. Draw special attention to the safety information. Hand the operating and installation instructions to the user.

## 11. Specification

### 11.1 Specification

Model	Hand dryer	
Type	HTE 4	HTE 5
Part number	073007	073008
Colour	white	signal white
Casing	Plastic (ABS)	Diecast aluminium, painted

 
## Operating details

Rated output	W	1800	1800
Output	W	1740	1740
Fan power	W	60	60
Connection		1/N 220-240 V 50 Hz	1/N 220-240 V 50 Hz
Protection cat. to EN 60335		II	II
Protection		IP 23	IP 23
Operating noise	~ dB (A)	54	54
Air throughput	~ m³/h	146	146
Runtime	~ s	36	36


### Dimensions and weights

Dimensions H x W x D	mm	250 x 238 x 230	266 x 257 x 230
Weight	kg	2.5	4
Maximum length of the power cable	mm	200	200

## 11.2 Wiring diagram

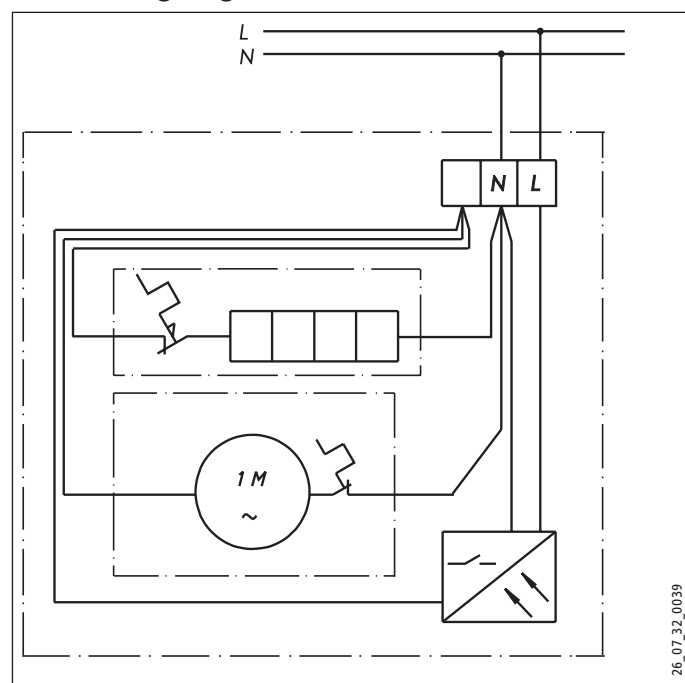

### 11.3 Clearances

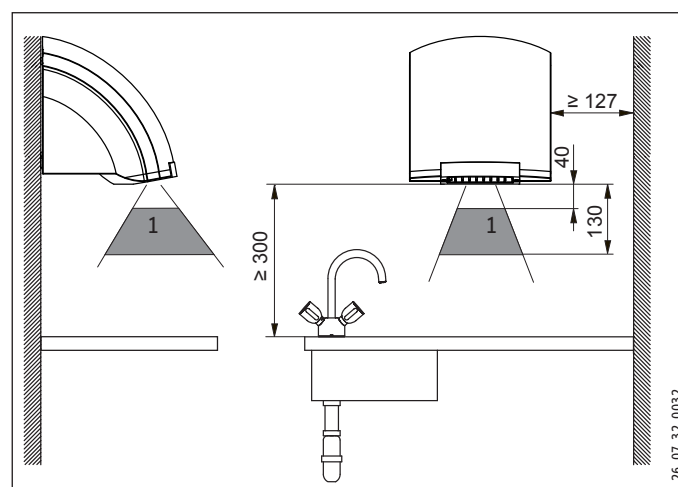 











### 1 Detection range of IR proximity sensor

#### 11.4 Guidelines for installation height



**Note!**  
Height (mm) indicates the clearance between the bottom of the appliance and the floor.

 
Age	Age	Height (mm)
		
Adult man		1350
		
Adult woman		1250
 		
Nursery school age	4 - 7	810
 		
Primary school age	7 - 10	910
 		
Middle school age	10 - 13	1120
 		
High school age	13 - 16	1250

# INSTALLATION

## Specification


### 11.5 Dimensions

#### 11.5.1 HTE 4

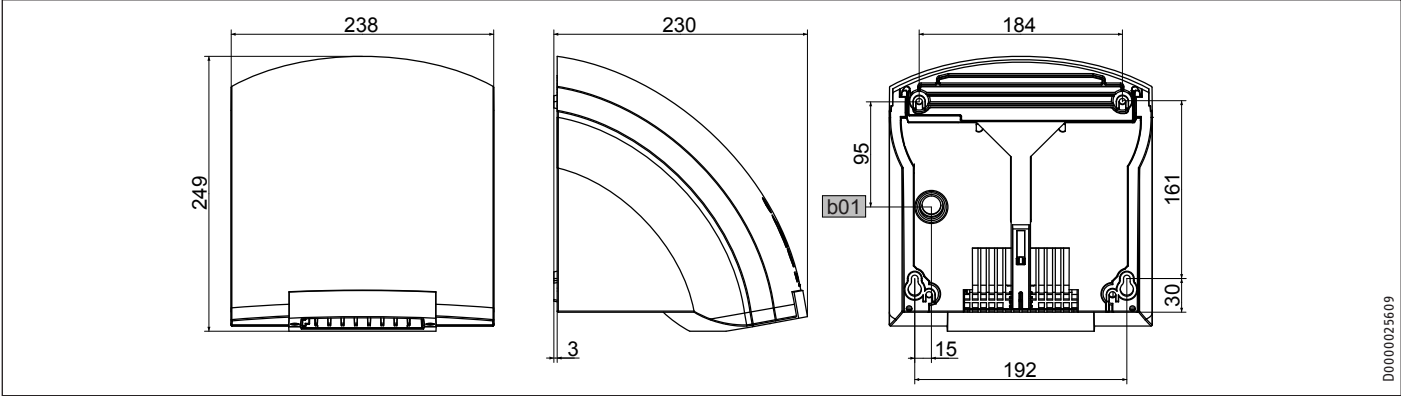

b01 Entry electrical cables  
(view from the back of the appliance)

#### 11.5.2 HTE 5

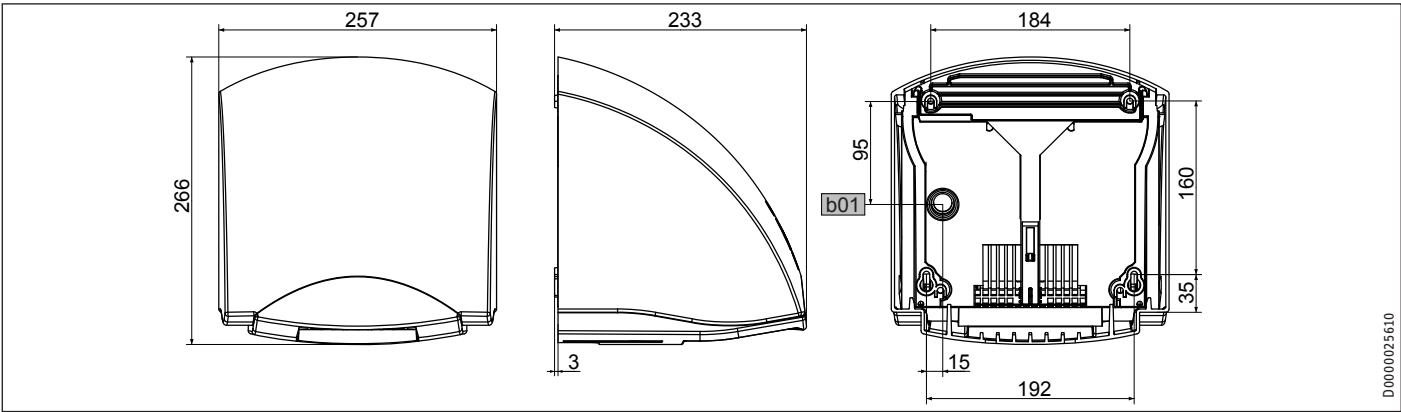 

b01 Entry electrical cables  
(view from the back of the appliance)



### **Guarantee**

The guarantee conditions of our German companies do not apply to appliances acquired outside of Germany. In countries where our subsidiaries sell our products a guarantee can only be issued by those subsidiaries. Such guarantee is only granted if the subsidiary has issued its own terms of guarantee. No other guarantee will be granted.

We shall not provide any guarantee for appliances acquired in countries where we have no subsidiary to sell our products. This will not affect warranties issued by any importers.

### **Environment and recycling**

We would ask you to help protect the environment. After use, dispose of the various materials in accordance with national regulations.

# AUSTRALIA

## CUSTOMER SERVICE AND WARRANTY

### Stiebel Eltron Warranty for Hand Dryers & Space Heaters – Models HTE, ULTRONIC, CNS, CK & CK Z.

#### Who gives the warranty

1. The warranty is given by Stiebel Eltron (Aust) Pty Ltd (A.B.N. 82 066 271 083) of 294 Salmon Street, Port Melbourne, Victoria, 3207 (“we”, “us” or “our”).

#### The warranty

2. This warranty applies to Stiebel Eltron Hand Dryers and Space Heaters – Models HTE 4, HTE 5, ULTRONIC, CNS 100, CNS 150, CNS 200, CNS 250, CK 20S and CKZ 20S (the “unit”) manufactured after 1 May 2015.

3. Subject to the warranty exclusions we will repair or replace, at our absolute discretion, a faulty component in your unit free of charge if it fails to operate in accordance with its specifications during the warranty period.

4. If we repair or replace a faulty component to your unit under this warranty, the warranty period is not extended from the time of the repair or replacement.

5. The warranty period commences on the date of purchase of the unit. Where the date of purchase is not known, then the warranty period will commence 2 months after the date of manufacture.

6. The warranty period for a unit is shown in the table below.

Component	Warranty period
All components	5 years from the date of purchase of the unit.

#### Your entitlement to make a warranty claim

7. You are entitled to make a warranty claim if:

7.1. you own the unit or if you have the owner’s consent to represent the owner of the unit;

7.2. you contact us within a reasonable time of discovering the problem with the unit;

#### How you make a warranty claim

8. To make a warranty claim you must provide us with the following information:

8.1. The model number of the unit;

8.2. A description of the problem with the unit;

8.3. The name, address and contact details (such as phone number and e-mail address) of the owner;

8.4. The address where the unit is installed and the location (e.g. in living room);

8.5. The serial number of the unit;

8.6. The date of purchase of the unit and the name of the seller of the unit;

8.7. The date of installation of the unit where appropriate;

8.8. A copy of the certificate of compliance when the unit was installed where appropriate.

9. The contact details for you to make your warranty claim are:

Name: Stiebel Eltron (Aust) Pty Ltd  
Address: 294 Salmon Street, Port Melbourne, Victoria, 3207  
Telephone: 1800 153 351  
(8.00 am to 5.00 pm AEST Monday to Friday)  
Contact person: Customer Service Representative  
E-mail: service@stiebel-eltron.com.au

10. We will arrange a suitable time with you to inspect and test the unit.

#### Warranty exclusions

11. We may reject your warranty claim if:

11.1. The unit was not installed by registered and qualified tradespeople, where required.

11.2. The unit was not installed and commissioned:

(a) in Australia;

(b) in accordance with the Operating and Installation Guide; and

(c) in accordance with the relevant statutory and local requirements of the State or Territory in which the unit is installed.

11.3. The unit has not been operated or maintained in accordance with the Operating and Installation Guide.

11.4. The unit does not bear its original Serial Number or Rating Label.

11.5. The unit was damaged by any or any combination of the following:

(a) normal fair wear and tear;

(b) connection to an incorrect power supply;

(c) connection to faulty equipment, such as faulty circuit breaker;

(d) accidental damage;

(e) act of God, including damage by flood, storm, fire, lightning strike and the like;

(f) wiring not to AS3000 Standards;

(g) ingress of vermin

11.6. The unit was damaged before it was installed e.g. it was damaged in transit.

11.7. An unauthorised person has modified, serviced, repaired or attempted to repair the unit without our consent.

11.8. Non genuine parts other than those manufactured or approved by us have been used on the unit.

12. We may charge you:

12.1. for any additional transport costs if the unit is installed more than 30 kilometres from our closest authorised service technician.

12.2. for the extra time it takes our authorised service technician to access the unit for inspection and testing if it is not sited in accordance with the Operating and Installation Guide and not readily accessible for inspection.

12.3. for any extra costs of our authorised service technician to make the unit safe for inspection.

13. You must ensure that access to the unit by our authorised service technician is safe and free from obstruction.

14. Our authorised service technician may refuse to inspect and test the unit until you provide safe and free access to it, at your cost.

15. If we reject your warranty claim in accordance with clause 11, we may charge you for our authorised service technician's labour costs to inspect and test the unit.

16. In order to properly test the unit we may remove it to another location for testing.

#### **Australian Consumer Law**

17. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

18. The Stiebel Eltron warranty for the unit is in addition to any rights and remedies you may have under the Australian Consumer Law.

## Deutschland

STIEBEL ELTRON GmbH & Co. KG  
Dr.-Stiebel-Straße 33 | 37603 Holzminden  
Tel. 05531 702-0 | Fax 05531 702-480  
info@stiebel-eltron.de  
www.stiebel-eltron.de

## Verkauf

### Kundendienst

### Ersatzteilverkauf

Tel. 05531 702-110 | Fax 05531 702-95108 | info-center@stiebel-eltron.de  
Tel. 05531 702-111 | Fax 05531 702-95890 | kundendienst@stiebel-eltron.de  
Tel. 05531 702-120 | Fax 05531 702-95335 | ersatzteile@stiebel-eltron.de

## Australia

STIEBEL ELTRON Australia Pty. Ltd.  
294 Salmon Street | Port Melbourne VIC 3207  
Tel. 03 9645-1833 | Fax 03 9644-5091  
info@stiebel-eltron.com.au  
www.stiebel-eltron.com.au

## Austria

STIEBEL ELTRON Ges.m.b.H.  
Gewerbegebiet Neubau-Nord  
Margaritenstraße 4 A | 4063 Hörsching  
Tel. 07221 74600-0 | Fax 07221 74600-42  
info@stiebel-eltron.at  
www.stiebel-eltron.at

## Belgium

STIEBEL ELTRON bvba/sprl  
't Hofveld 6 - D1 | 1702 Groot-Bijgaarden  
Tel. 02 42322-22 | Fax 02 42322-12  
info@stiebel-eltron.be  
www.stiebel-eltron.be

## China

STIEBEL ELTRON (Tianjin) Electric Appliance Co., Ltd.  
Plant C3, XEDA International Industry City  
Xiqing Economic Development Area  
300385 Tianjin  
Tel. 022 8396 2077 | Fax 022 8396 2075  
info@stiebeleltron.cn  
www.stiebeleltron.cn

## Czech Republic

STIEBEL ELTRON spol. s r.o.  
Dopraváků 749/3 | 184 00 Praha 8  
Tel. 251116-111 | Fax 235512-122  
info@stiebel-eltron.cz  
www.stiebel-eltron.cz

## Finland

STIEBEL ELTRON OY  
Kapinakuja 1 | 04600 Mäntsälä  
Tel. 020 720-9988  
info@stiebel-eltron.fi  
www.stiebel-eltron.fi

## France

STIEBEL ELTRON SAS  
7-9, rue des Selliers  
B.P. 85107 | 57073 Metz-Cédex 3  
Tel. 0387 7438-88 | Fax 0387 7468-26  
info@stiebel-eltron.fr  
www.stiebel-eltron.fr

## Hungary

STIEBEL ELTRON Kft.  
Gyár u. 2 | 2040 Budaörs  
Tel. 01 250-6055 | Fax 01 368-8097  
info@stiebel-eltron.hu  
www.stiebel-eltron.hu

## Japan

NIHON STIEBEL Co. Ltd.  
Kowa Kawasaki Nishiguchi Building 8F  
66-2 Horikawa-Cho  
Saiwai-Ku | 212-0013 Kawasaki  
Tel. 044 540-3200 | Fax 044 540-3210  
info@nihonstiebel.co.jp  
www.nihonstiebel.co.jp

## Netherlands

STIEBEL ELTRON Nederland B.V.  
Daviotenweg 36 | 5222 BH 's-Hertogenbosch  
Tel. 073 623-0000 | Fax 073 623-1141  
info@stiebel-eltron.nl  
www.stiebel-eltron.nl

## New Zealand

Stiebel Eltron NZ Limited  
61 Barrys Point Road | Auckland 0622  
Tel. +64 9486 2221  
info@stiebel-eltron.co.nz  
www.stiebel-eltron.co.nz

## Poland

STIEBEL ELTRON Polska Sp. z o.o.  
ul. Działkowa 2 | 02-234 Warszawa  
Tel. 022 60920-30 | Fax 022 60920-29  
biuro@stiebel-eltron.pl  
www.stiebel-eltron.pl

## Russia

STIEBEL ELTRON LLC RUSSIA  
Urzhumskaya street 4,  
building 2 | 129343 Moscow  
Tel. +7 495 125 0 125  
info@stiebel-eltron.ru  
www.stiebel-eltron.ru

## Slovakia

STIEBEL ELTRON Slovakia, s.r.o.  
Hlavná 1 | 058 01 Poprad  
Tel. 052 7127-125 | Fax 052 7127-148  
info@stiebel-eltron.sk  
www.stiebel-eltron.sk

## Switzerland

STIEBEL ELTRON AG  
Industrie West  
Gass 8 | 5242 Lupfig  
Tel. 056 4640-500 | Fax 056 4640-501  
info@stiebel-eltron.ch  
www.stiebel-eltron.ch

## Thailand

STIEBEL ELTRON Asia Ltd.  
469 Moo 2 Tambol Klong-Jik  
Amphur Bangpa-In | 13160 Ayutthaya  
Tel. 035 220088 | Fax 035 221188  
info@stiebeleltronasia.com  
www.stiebeleltronasia.com

## United Kingdom and Ireland

Stiebel Eltron UK Ltd.  
Unit 12 Stadium Court  
Stadium Road | CH62 3RP Bromborough  
Tel. 0151 346-2300 | Fax 0151 334-2913  
info@stiebel-eltron.co.uk  
www.stiebel-eltron.co.uk

## United States of America

STIEBEL ELTRON, Inc.  
17 West Street | 01088 West Hatfield MA  
Tel. 0413 247-3380 | Fax 0413 247-3369  
info@stiebel-eltron-usa.com  
www.stiebel-eltron-usa.com



Irrtum und technische Änderungen vorbehalten! | Subject to errors and technical changes! | Sous réserve d'erreurs et de modifications techniques! | Onder voorbehoud van vergissingen en technische wijzigingen! | Salvo error o modificación técnica! | Excepto erro ou alteração técnica | Zastrzeżone zmiany techniczne i ewentualne błędy | Omyly a technické změny jsou vyhrazeny! | A muszáki változtatások és tévedések jogát fenntartjuk! | Отсутствие ошибок не гарантируется. Возможны технические изменения. | Chyby a technické zmeny sú vyhradené!

Stand 9646

**STIEBEL ELTRON**